

200 Main Pawl Spring Replacement

- A. To remove the old spring, use a screwdriver or punch to push down on the spring. As shown in fig. 1.
- B. After the spring releases from the main pawl, rotate it around until it can be slid off of the pawl stop on the main frame.
- C. To install the new spring, slide the long end under the pawl stop.
- D. Rotate around the pawl stop until the spring rests against the spring anchor pin. As shown in fig. 2.
- E. While keeping the main pawl engaged with the drum teeth, and the spring resting on the pawl stop, push the u-frame forward until the spring re-engages the spring anchor pin on the main pawl. As shown in fig. 3.

